

## Master Reset Dakota

There are a few instances in which you may want to perform a master reset on your Dakota, such as:

- not receiving a satellite signal
- want to restore the factory default settings
- not functioning properly

All settings, user data\*, and satellite data may be erased when resetting the GPS. User data can be backed up to the computer, therefore refer to related content before performing the reset.

To perform the master reset:

- Power the device off
- Press and hold your finger on the upper left side of the display
- Power the device on while still maintaining pressure on the display
- Release on the display when the Do you really want to erase all user data? message appears
- Touch Yes

The Dakota is now reset. You will want to leave the device outside with a clear view of the sky for a minimum of 20 minutes to acquire satellite data.

\*User data consists of waypoints, routes, tracks, and geocaches

-Optie 2-----

Insert the usb cable in in the Dakota, ONLY DAKOTA. Push the on button and keep pushing Still while pushing insert the usb to the computer

After about 30 seconds release the on button.

It should work by now.

If your computer sees the dakota, with windowd explorer remove all gpx files. (save the on the HD)

From:

<https://studie.famvisser.net/> - **Studie Pagina Chavoerah Maqor**

Permanent link:

[https://studie.famvisser.net/doku.php?id=geo\\_factory-reset&rev=1501690209](https://studie.famvisser.net/doku.php?id=geo_factory-reset&rev=1501690209)

Last update: **2022/05/06 21:58**

